



AVAILABLE FROM
williams
WILLIAMS IRONMONGERY

Williams Ironmongery Ltd (London)
1 Fashion Street
Spitalfields
London
E1 6LY
Contact: london@williams-ironmongery.co.uk
Tel: 0207 247 8821


Williams Ironmongery Ltd (Head Office)
Unit 89 Hartlebury Trading Estate
Hartlebury
Worcs
DY10 4JB
Contact: sales@williams-ironmongery.co.uk
Tel: 01299 250 824

Allart Select

Door Levers


Two classic 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

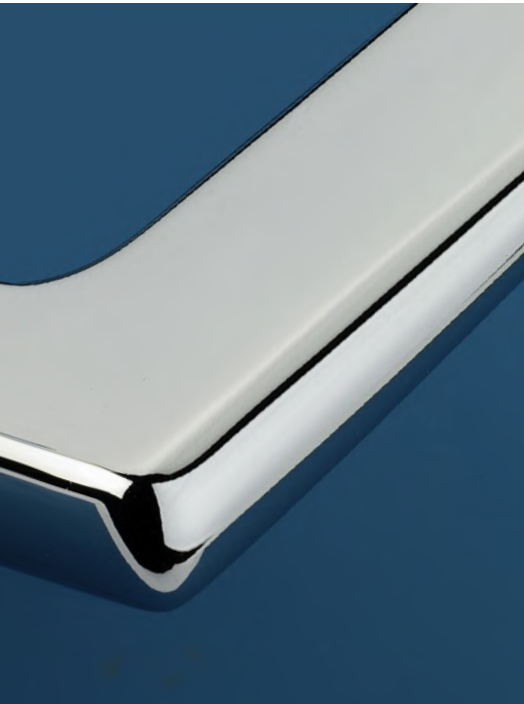


RH shown

▲ 7741

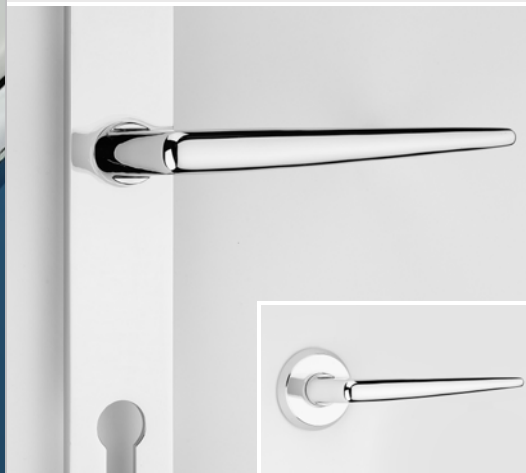

▲ with 49 series multipoint plate

▲ shown with **7844B** rosette

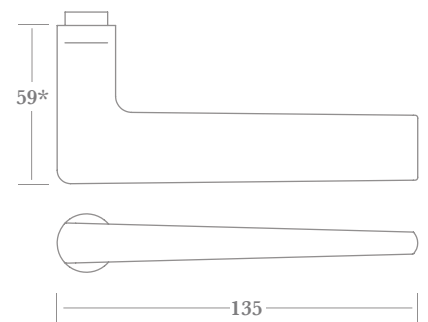

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. **7741**)

2) add FINISH (e.g. 7741**PC**)

If single lever only required add HANDING (e.g. 7741**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7741**PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7741**PC/BWN**).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.




RH shown

▲ 7742

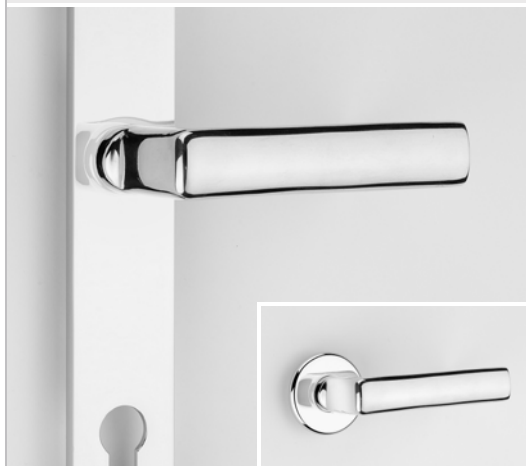

▲ with 49 series multipoint plate

▲ shown with **7845B** rosette

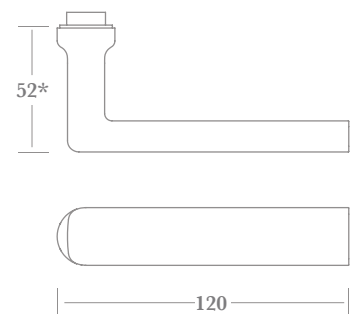

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

ST1:010

© Frank Allart 2018

Door Levers

Two Art Deco inspired contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




▲ 7729

RH shown



▲ shown with
3261A plate

▲ shown with
7842B rosette

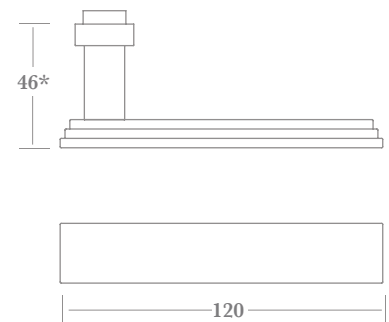

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7728**)

2) add FINISH (e.g. 7728**PC**)


If single lever only required add HANDING (e.g. 7728PC/**RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7728PC/**CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7728PC/**BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

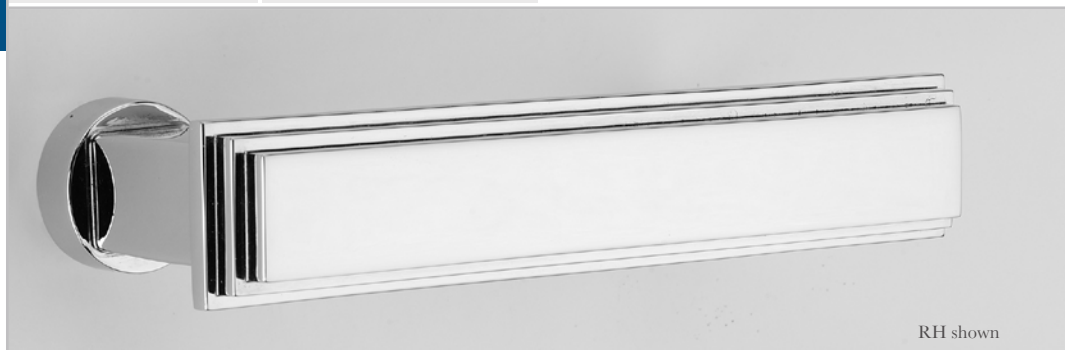


▲ 7728

RH shown



▲ shown with
5927C/R03 plate

▲ shown with
7842A rosette


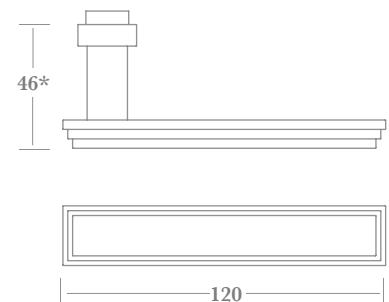


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.


Door Levers

Two classic Art Deco period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

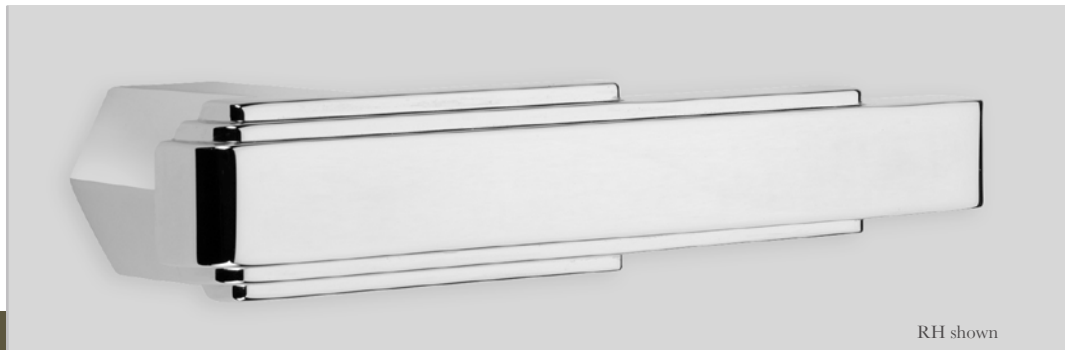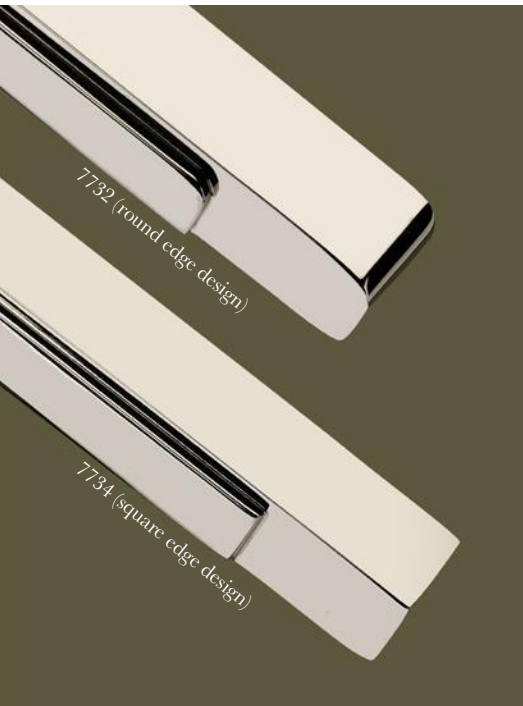


▲ **7732** (round edge design)

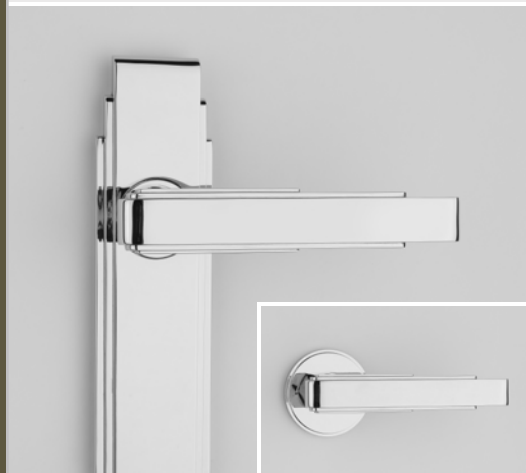


▲ shown with **6811A** plate


▲ shown with **7842B** rosette

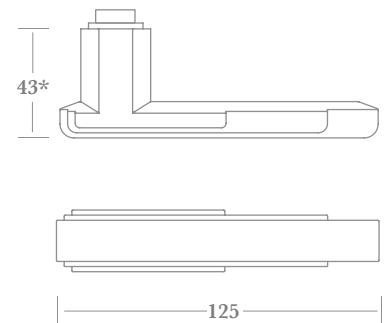

* total projection: add 7mm for rosette & 6mm for backplate. Lever design is suitable for use with backplates fitted with either type G flush collar or type J raised collar (other raised collar designs are not recommended).

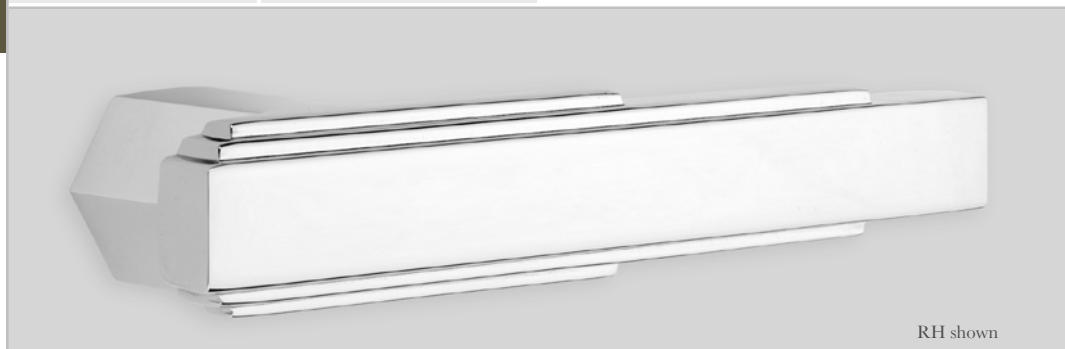


▲ **7734** (square edge design)

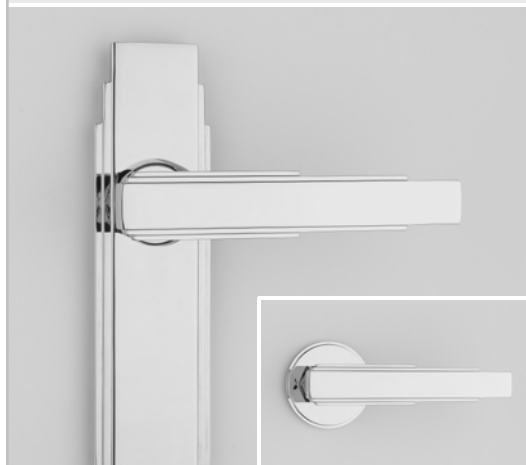

▲ shown with **6711A** plate

▲ shown with **7842B** rosette

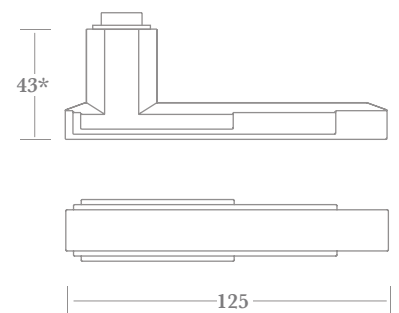

* total projection: add 7mm for rosette & 6mm for backplate. Lever design is suitable for use with backplates fitted with either type G flush collar or type J raised collar (other raised collar designs are not recommended).

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets - order as singles

1) select LEVER design (e.g. **7734**)

2) add FINISH (e.g. **7734PC**)

If single lever only required add HANDING (e.g. **7734PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7734PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. **7734PC/BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

Door Levers


Two traditional period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7.



RH shown

▲ 7774

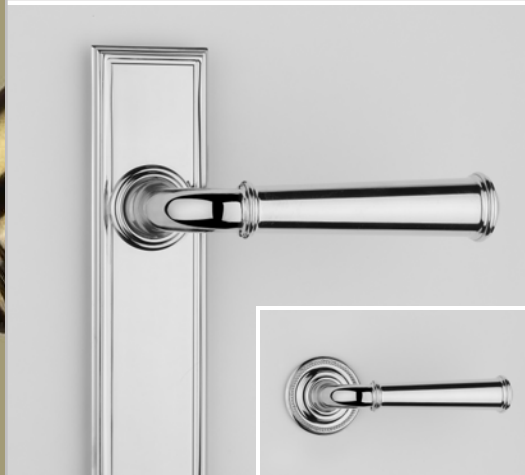
▲ shown with
6011A plate

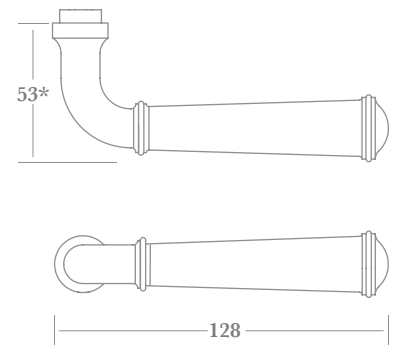▲ shown with
7847B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7774**)

2) add FINISH (e.g. **7774PC**)

If single lever only required add HANDING (e.g. **7774PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7774PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. **7774PC/BWN**).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.



RH shown

▲ 7775

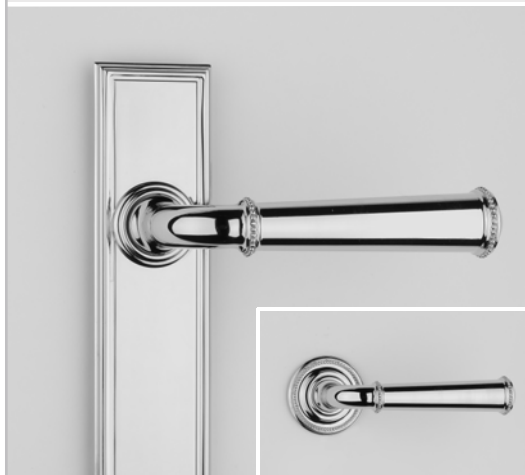
▲ shown with
6011A plate

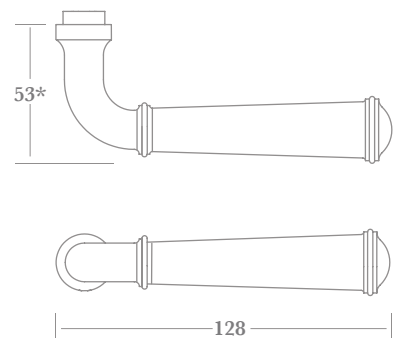▲ shown with
7847B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Levers

Three traditional period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7769**)

2) add FINISH (e.g. 7769**PC**)

If single lever only required add HANDING (e.g. 7769**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7769**PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7769**PC/BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.



RH shown

▲ 7769



RH shown

▲ 7770



RH shown

▲ 7771



▲ 7770 shown with
6011A plate





▲ 7770 shown with
7834B rosette



▲ 7769 shown with
7827B rosette



▲ 7771 shown with
7847B rosette

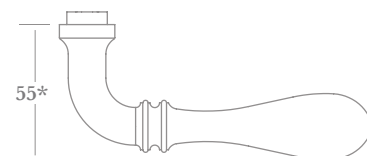


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Levers

One traditional period, and one 1960's inspired, Door Lever - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

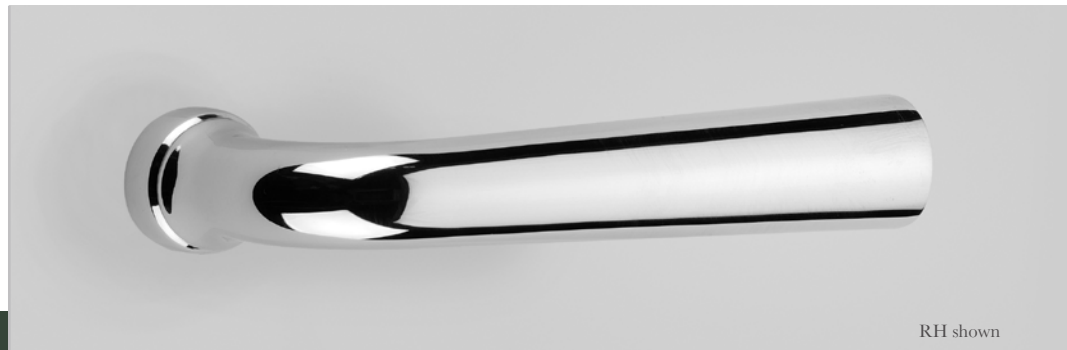


RH shown

▲ 7706



▲ with 49 series multipoint plate

▲ shown with 5951B rosette

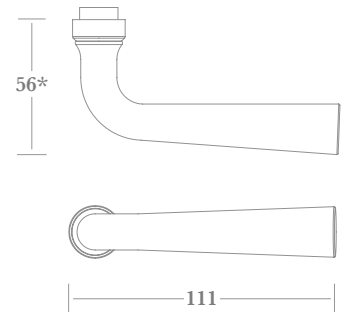

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7706**)

2) add FINISH (e.g. 7706**PC**)


If single lever only required add HANDING (e.g. 7706**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7706**PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7706**PC/BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

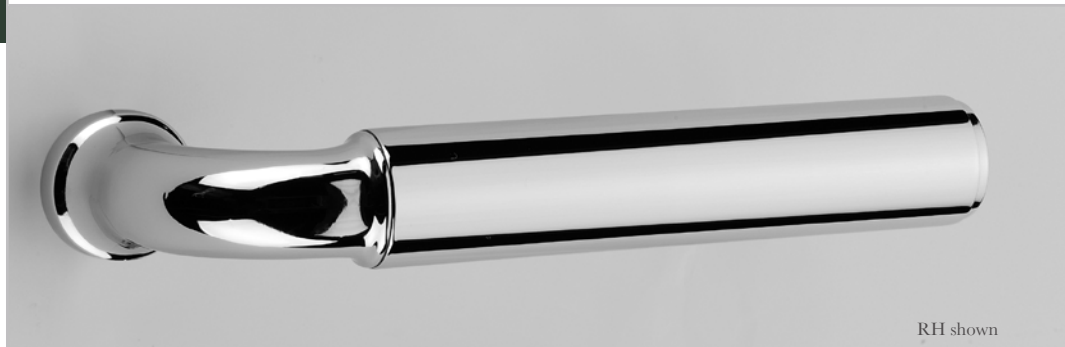


RH shown

▲ 7773



▲ with 49 series euro-profile lock plate

▲ shown with 7843B rosette

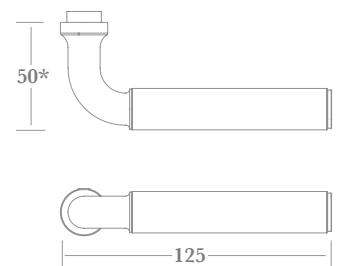

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.



ST1:060

© Frank Allart 2018

Door Levers

Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Whilst very similar in design, the 7716 is much slimmer and lighter than it's chunky and weightier brother, the 7717.

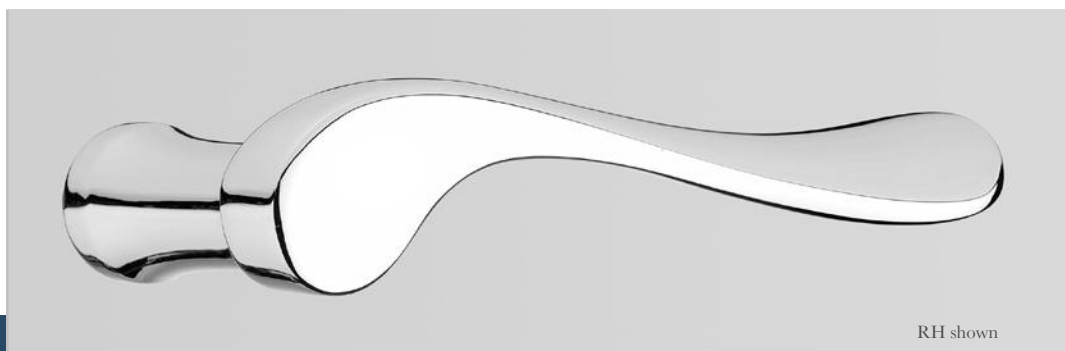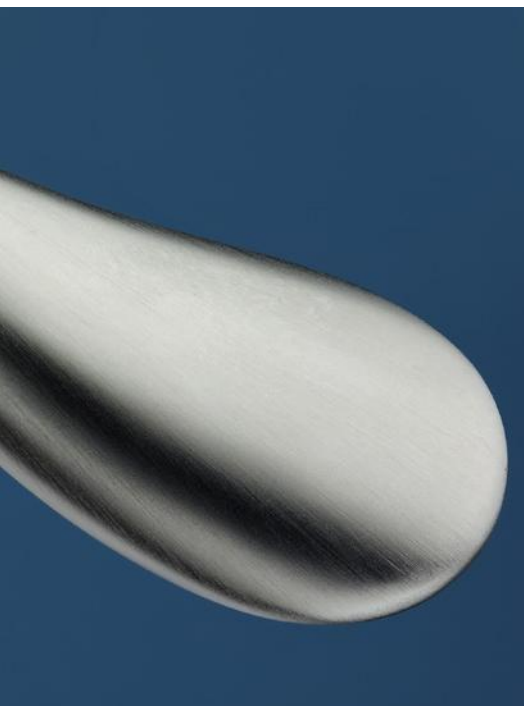


▲ **7716** (light design - single lever 230g)



▲ shown with **5911A** plate

▲ shown with **7834B** rosette

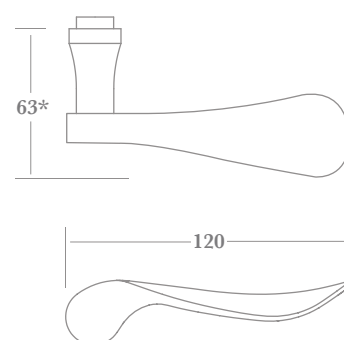

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets - order as singles

NB. Split Finish Sets are ordered as singles.

- 1) select LEVER (e.g. **7716**)
- 2) add FINISH (e.g. **7716PC**)


If single lever only required add HANDING (e.g. **7716PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7716PC/RH/CM**) - see DB3:200.


For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. **7716PC/BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

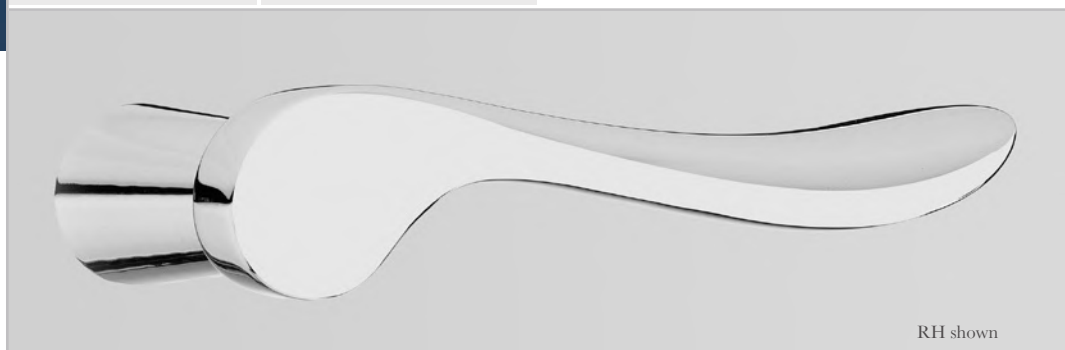


▲ **7717** (heavy design - single lever 360g)

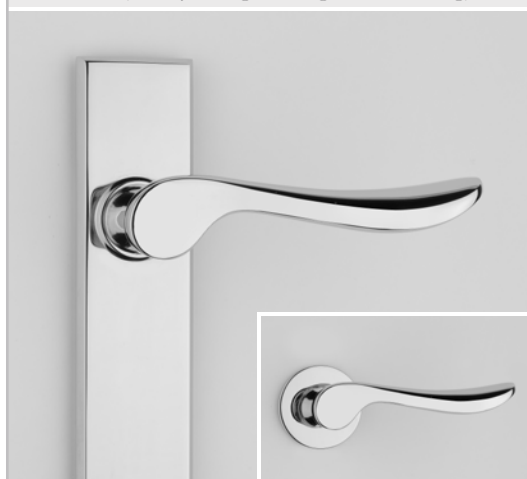

▲ shown with **4711A** plate

▲ shown with **7843B** rosette

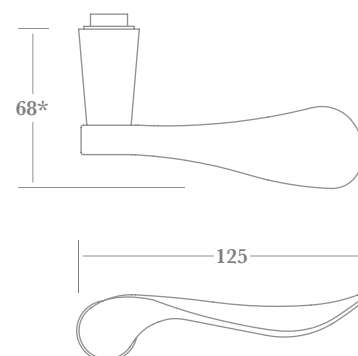

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Levers


Two contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7.



RH shown

▲ 7778

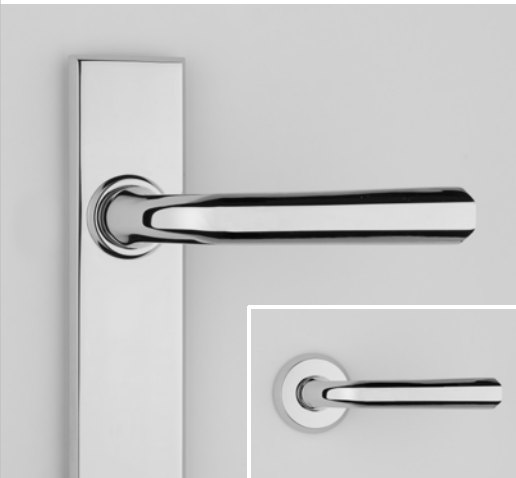
▲ shown with
4711A plate

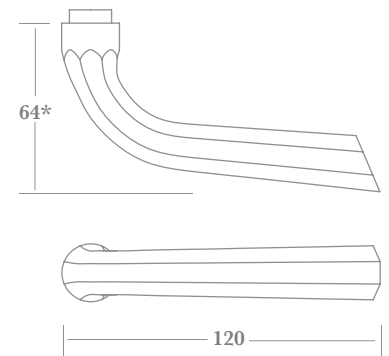▲ shown with
7844B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7778**)

2) add FINISH (e.g. **7778PC**)


If single lever only required add HANDING (e.g. **7778PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7778PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. **7778PC/BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.

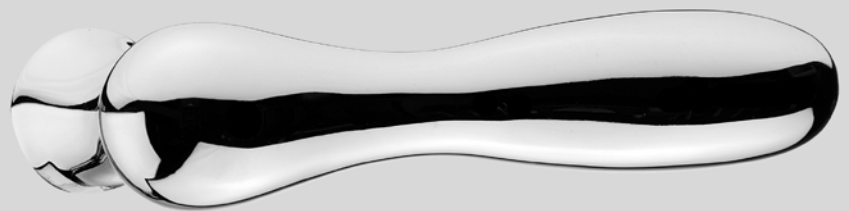

RH shown

▲ 7772


▲ shown with
4711A plate

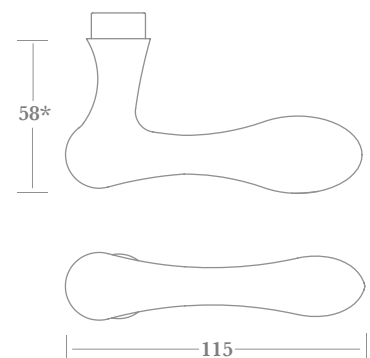
▲ shown with
7845B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.


Door Levers

Two 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

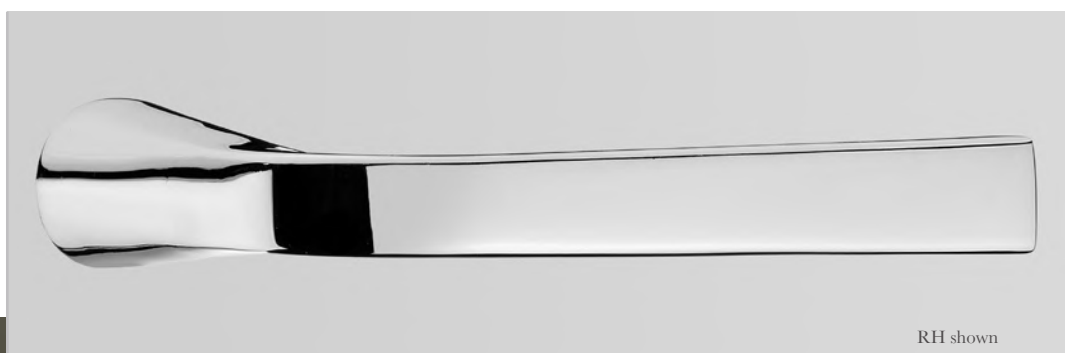


▲ 7733

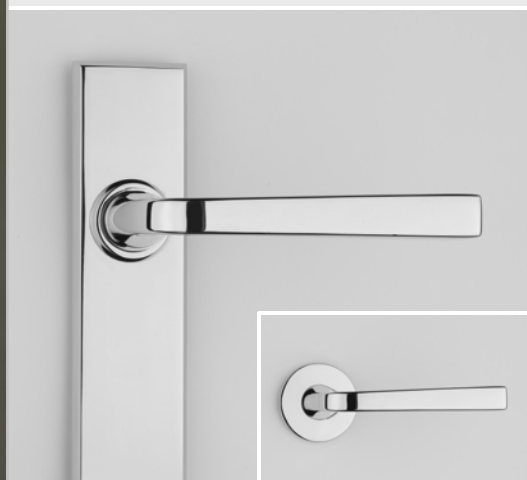


▲ shown with
4711A plate


▲ shown with
7843B rosette

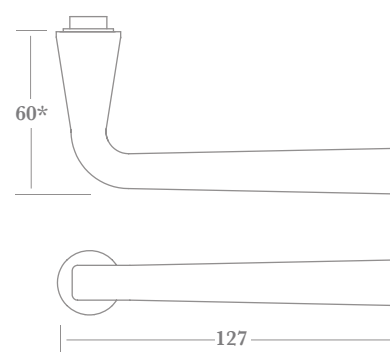

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

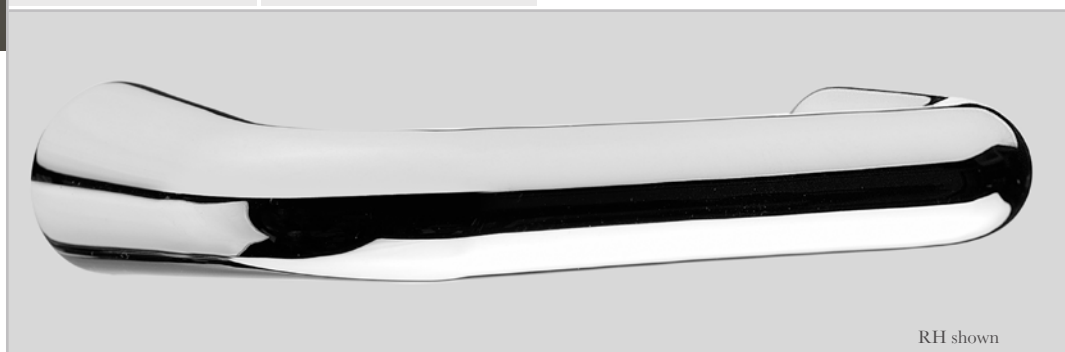


▲ 7776

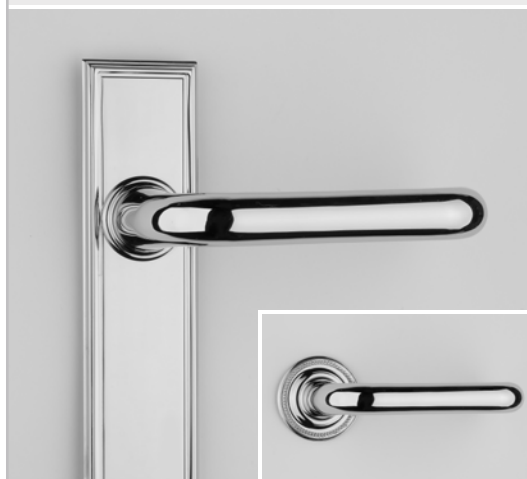

▲ shown with
6011A plate

▲ shown with
7847B rosette

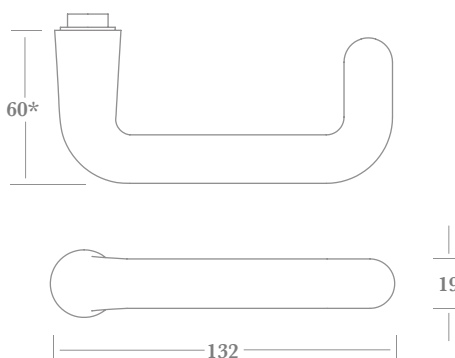

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7733**)

2) add FINISH (e.g. **7733PC**)

If single lever only required add HANDING (e.g. **7733PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7733PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. **7733PC/BWN**).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

Door Levers


Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7.

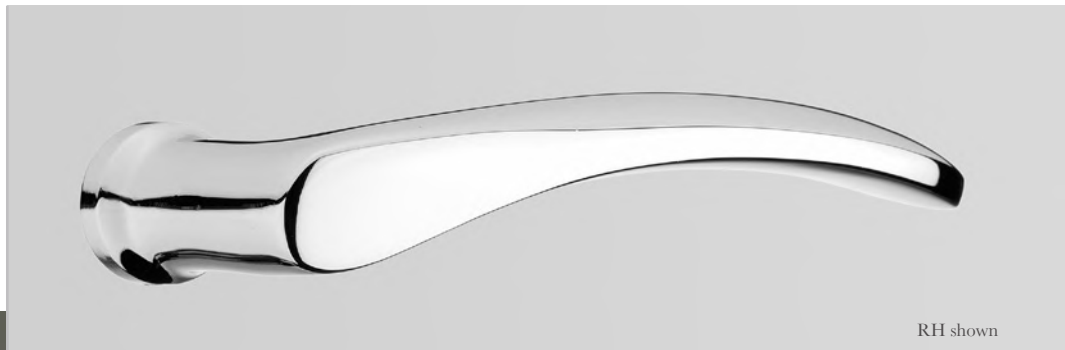

RH shown

▲ 7710

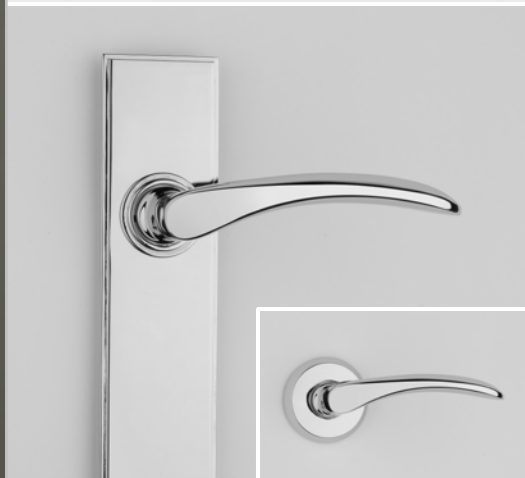
▲ shown with
5911A plate

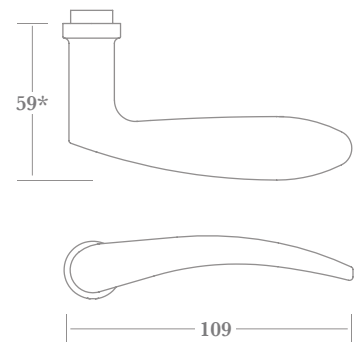▲ shown with
7844B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7710**)

2) add FINISH (e.g. 7710**PC**)


If single lever only required add HANDING (e.g. 7710**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7710**PC/RH/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7710**PC/BWN**).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.

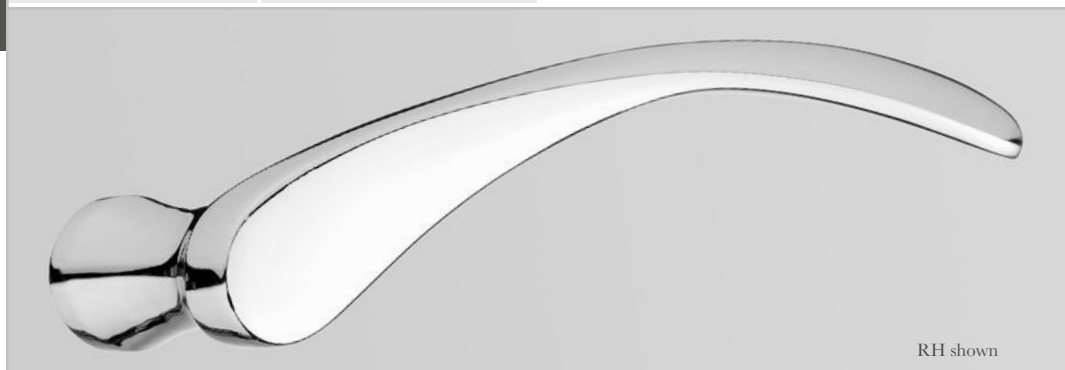

RH shown

▲ 7714

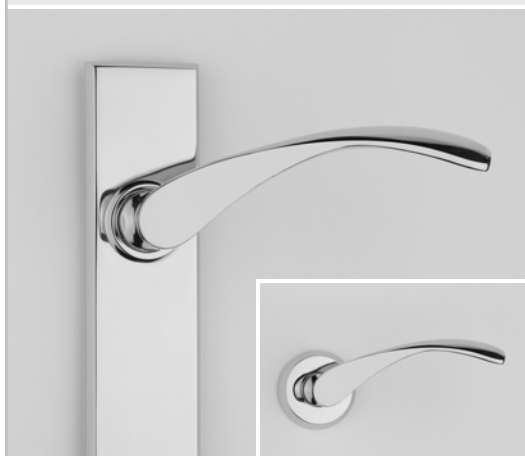
▲ shown with
4711A plate

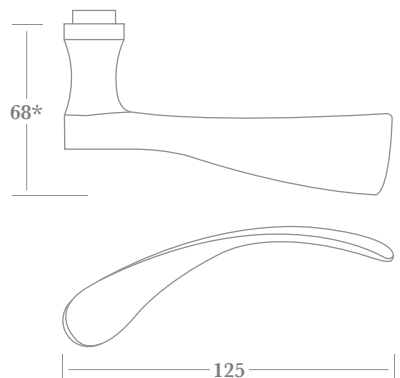▲ shown with
7844B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Levers


One Art Deco and one 1950's period Door Lever - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7.



RH shown

▲ 7731

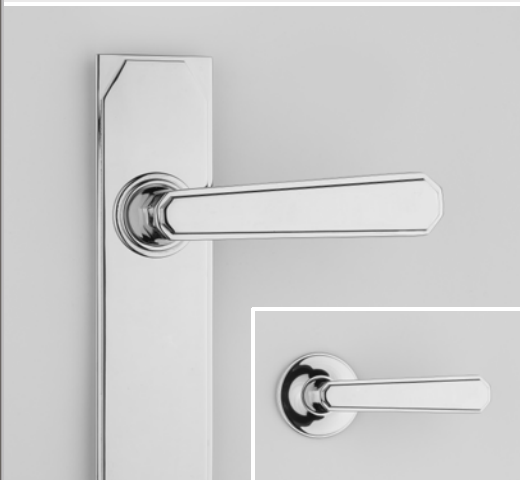
▲ shown with
6611A plate

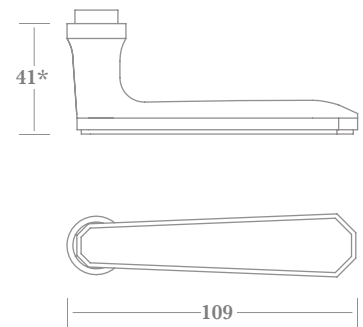▲ shown with
7841B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7731**)

2) add FINISH (e.g. 7731**PC**)


If single lever only required add HANDING (e.g. 7731**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7731**PC/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7731**PC/BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.

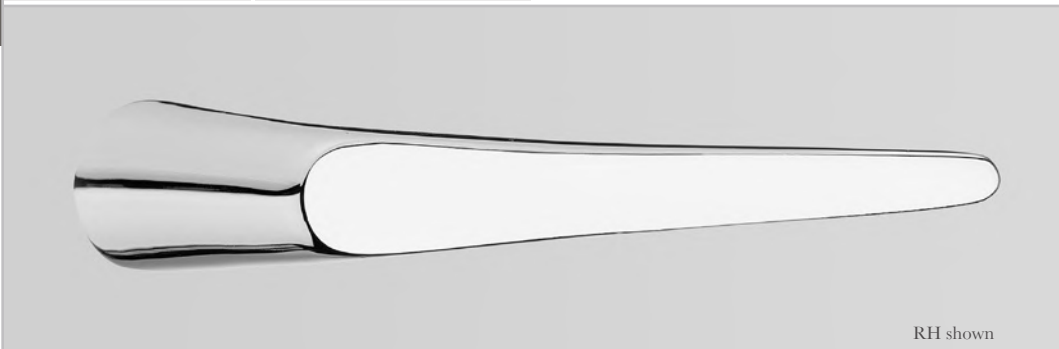

RH shown

▲ 7740


▲ shown with
5911A plate

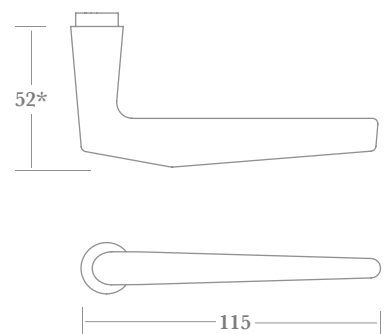▲ shown with
7844B rosette


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Levers

Two classic Regency Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




▲ 7762



▲ shown with
5911A plate

▲ shown with
7841B rosette

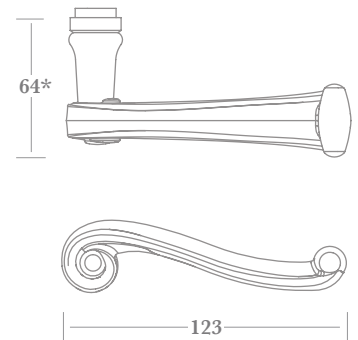

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. 7767)

2) add FINISH (e.g. 7767PC).

If single lever only required add HANDING (e.g. 7767PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7767PC/RH/CM) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7767PC/BWN).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.




▲ 7767



▲ shown with
6011A plate

▲ shown with
7834B rosette

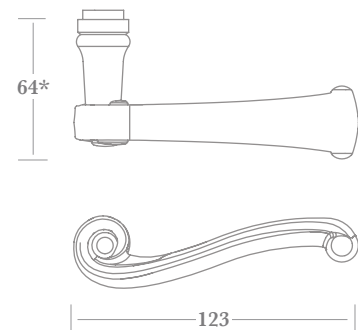

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Levers

Two classic Edwardian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




▲ 7761



▲ shown with
6011A plate

▲ shown with
7822B rosette

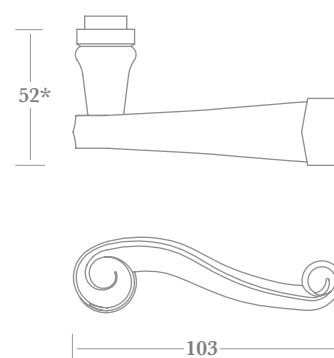

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7766**)

2) add FINISH (e.g. 7766**PC**)


If single lever only required add HANDING (e.g. 7766PC/**RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7766PC/**RH/CM**) - see DB3:200.


For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7766PC/**BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

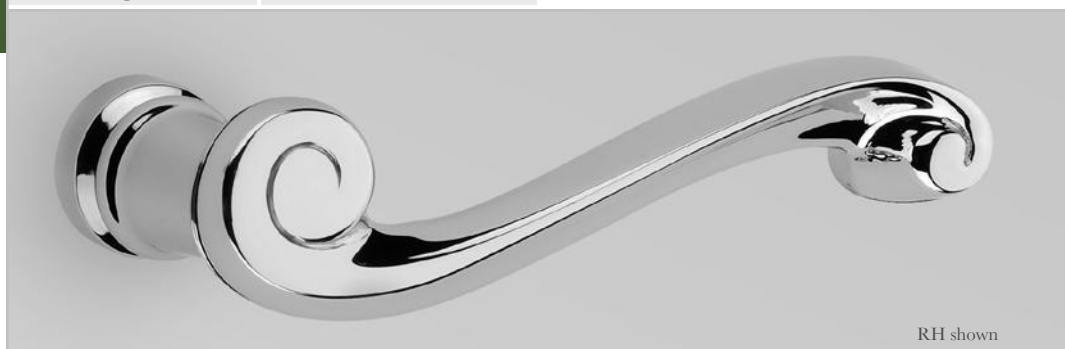


▲ 7766

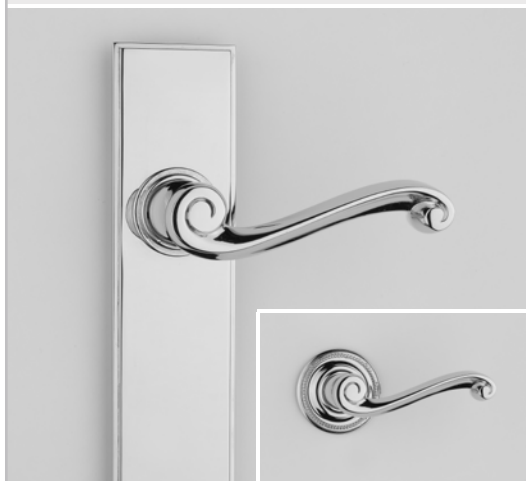

▲ shown with
5911A plate

▲ shown with
7847B rosette

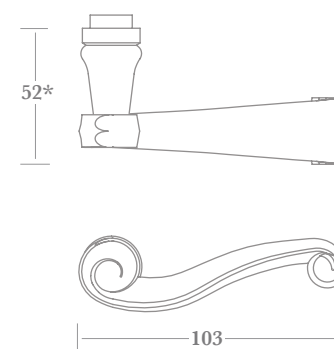


* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Levers

Two classic Georgian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

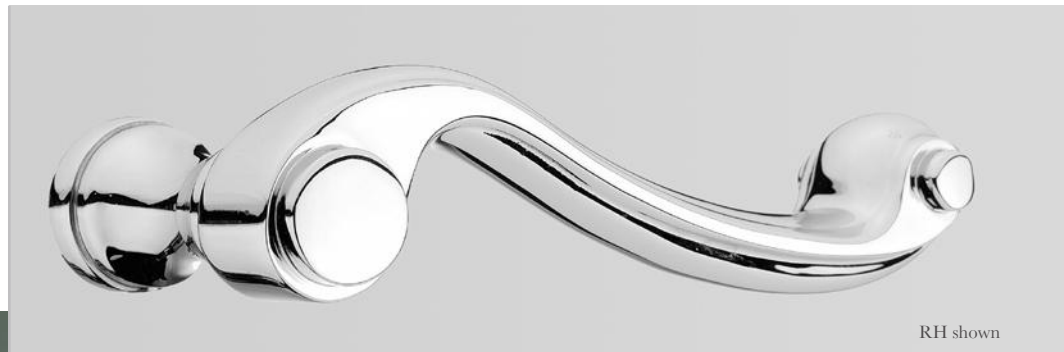


▲ 7720



▲ shown with
6011A plate

▲ shown with
7847B rosette

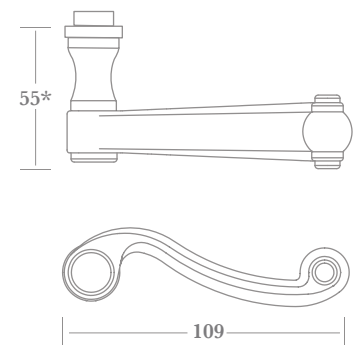

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. 7720)

2) add FINISH (e.g. 7720PC)

If single lever only required add HANDING (e.g. 7720PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7720PC/RH/CM) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. 7720PC/BWN).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.




▲ 7724



▲ shown with
5911A plate

▲ shown with
7834B rosette

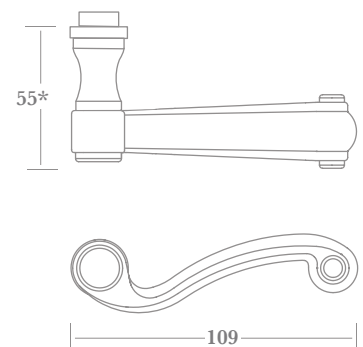

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Door Lever

An Art Deco inspired Door Lever designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

Restricted availability - please contact us for further information





▲ 7730



▲ shown with
3221B plate

▲ shown with
7842B rosette

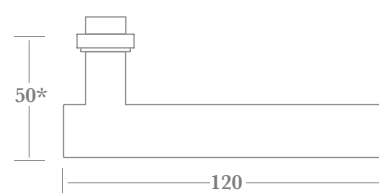

* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -
order as singles

1) select LEVER (e.g. **7730**)

2) add FINISH (e.g. **7730PC**)

If single lever only required add HANDING (e.g. **7730PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7730PC/RH/CM**) - see DB3:200.

For use with Baldwin 7.2mm spindles, diamond orientation, add BWN to code (e.g. **7730PC/BWN**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.